DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-591 REV. G
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-591 REV. 3
REF TCCA STC: SH92-6
REF FAA STC: SH967NE

PURPOSE:

TO PROVIDE AN OPTIONAL CUSHION KIT TO BE INSTALLED ON THE D350-591-111A/-113/-115/-117A/-119 Heli-Access-Step™ (THE D2856-400-720 ABRASION STRIP IS REPLACED WITH THE D3595-200-300 CUSHION).

CHANGE:

FOR D350-591-111A/-113/-115 @ CHG 005 (OR LATER), D350-591-117A @ CHG 003 (OR LATER) AND D350-591-119 @ CHG 004 (OR LATER), THE PARTS LIST OF INSTALLATION INSTRUCTIONS D350-591 AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-591 IS AMENDED AS FOLLOWS:

QTY	QTY	QTY	QTY	QTY	Part Number	Description
-111A	-113	-115	-117A	-119		
X					D350-591-111A	Heli-Access-Step™, Long Step – High Skid
	Х				D350-591-113	Heli-Access-Step™, Short Step – High Skid
		Х			D350-591-115	Heli-Access-Step™, Short Step – Low Skid
			X		D350-591-117A	Heli-Access-Step™, Pre-Flight Step
				X	D350-591-119	Heli-Access-Step™, Long Step – Low Skid
					D0040	OTED ACCEMBLY (LICH OLICET)
	1				D2310	STEP ASSEMBLY (HIGH-SHORT)
1 1					D2311	STEP ASSEMBLY (HIGH-LONG)
		11	l		D2354	STEP ASSEMBLY (LOW-SHORT)
				11	D2355	STEP ASSEMBLY (LOW-LONG)
4	2	2	2	2	D2171	CLAMP
4	2	2	2	2	D2182B035	CUSHION
8	4	4	4	4	D2102B033	RADIUS BLOCK
H	-		1		D2362-041	SUPPORT BRACKET
2	1			1	D2362-3	SUPPORT BRACKET
	•	1		•	D2362-5	SUPPORT BRACKET
2	1	1	1	1	D3595-200-300	CUSHION (NEW)
				<u> </u>	D0000 200 000	COCINCIA (NEVI)
2	2	2		2	AN3-37A	BOLT
		4			AN4-20A	BOLT (REPLACED, WAS AN4-16A)
8	4			4	AN4-21A	BOLT (REPLACED, WAS AN4-20A)
1	1	1	4	1	AN4-22A	BOLT
4	4	4		4	NAS1149D0363J	WASHER (OR AN960JD10)
10	6	2	4	6	NAS1149D0463J	WASHER (OR AN960JD416)
		4			NAS1149D0416J	WASHER (OR AN960JD416L)
2	2	2		2	MS21042L3	NUT
9	5	5	4	5	MS21042L4	NUT

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

BY: D. SHEPHERD (DE # 02)

DATE: 10.06.08

CERT. NO.: SH92-6

ISSUE NO.: 11

Α	NEW IS	NEW ISSUE.			10.06.08
REV.			DESCRIPTION	BY	DATE
DESIGN	P		DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA		
DRAWN #		N N			
CHECKED		4	DRAWING NO.		REV. A
MFG. APPR.		N/A	DSI 9525	5	SHEET 1 OF 4
APPROVED		140	TITLE		SCALE
DE APPR.		#	STEP CUSHION CHANGE N		NTS
DATE 10.06.08			COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.		

THE DSI-9525-XXX KITS THAT ARE AVAILABLE FROM DART TO UPGRADE THE D350-591-111A/-113/-115 KITS @ CHG 004 (OR EARLIER), THE D350-591-117A KIT @ CHG 002 (OR EARLIER) AND THE D350-591-119 KIT @ CHG 003 (OR EARLIER) ARE AS FOLLOWS:

QTY -011	QTY -013	QTY -015	QTY -017	Part Number	Description
X		-		DSI-9525-011	STEP CUSHION KIT (FOR D350-591-111A)
	Х			DSI-9525-013	STEP CUSHION KIT (FOR D350-591-113/-119)
		Х		DSI-9525-015	STEP CUSHION KIT (FOR D350-591-115)
			Х	DSI-9525-017	STEP CUSHION KIT (FOR D350-591-117A)
2	1	1	1	D3595-200-300	CUSHION
		4		AN4-20A	BOLT
8	4			AN4-21A	BOLT
			4	AN4-22A	BOLT
8	4	4	4	NAS1149D0463J	WASHER (OR AN960JD416)
8	4	4	4	MS21042L4	NUT

INSTRUCTIONS:

TO INSTALL THE D3595-200-300 CUSHION:

- 1. REMOVE THE STEP PER ICA-D350-591 SECTION 32.2
- 2. REMOVE THE D2856-400-720 ABRASION STRIP PER ICA-D350-591 SECTION 32.4
- 3. POSITION THE D3595-200-300 CUSHION AS INDICATED ON SHEET 3 OR 4 (AS APPLICABLE) OF THIS SERVICE INSTRUCTION.
- 4. REINSTALL THE STEP PER ICA-D350-591 SECTION 32.1 AS APPLICABLE USING THE NEW HARDWARE PROVIDED AS SHOWN ON SHEET 3 OR 4 (AS APPLICABLE) OF THIS SERVICE INSTRUCTION.

WEIGHT AND BALANCE:

THERE IS A NEGLIGIBLE WEIGHT INCREASE WITH THIS MODIFICATION.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-0-01

APPROVED

DATE: 10.06.08

CERT. NO.: SH92-6

ISSUE NO.: 11

D. SHEPHERD (DE # 02)

DESIGN	P	DART AEROSPAC	CE LTD	
DRAWN	1	HAWKESBURY, ONTARIO, CANADA		
CHECKED	4	DRAWING NO.	REV. A	
MFG. APPR.	N/A	DSI 9525	SHEET 2 OF 4	
APPROVED	140	TITLE	SCALE	
DE APPR.	-//	STEP CUSHION CHANGE	NTS	
DATE 10.0	6.08	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.		

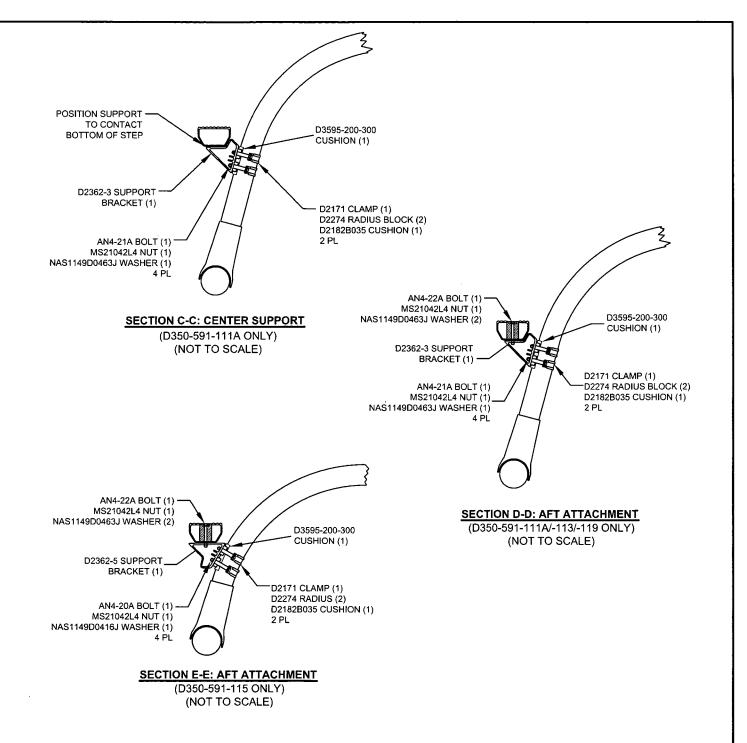


FIGURE 32-9: Crosstube Attachment

REF ICA-D350-591

FIGURE 9: Crosstube Attachment

REF D350-591

CANADA DEPARTMENT OF TRANSPORT AIRCRAFT CERTIFICATION **BRANCH** DAO # 01-O-01

D. SHEPH

DATE: 10.06.08 CERT. NO .: . SH92-6 ISSUE NO .: _

DESIGN	P	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA		
DRAWN	16			
CHECKED	4	DRAWING NO.	REV. A	
MFG. APPR.	N/A	DSI 9525	SHEET 3 OF 4	
APPROVED	149	TITLE	SCALE	
DE APPR.	#	STEP CUSHION CHANGE	NTS	
DATE 10.0	6.08	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OF COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT		

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DARK AREOSPACE LTD.

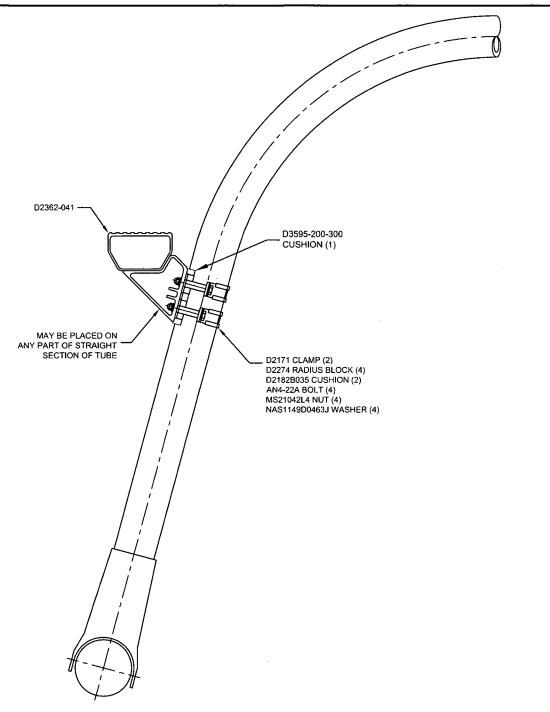


FIGURE 32-10: D350-591-117A Heli-Access-Step[™], Pre-Flight Step REF ICA-D350-591

FIGURE 10: D350-591-117A Heli-Access-Step™, Pre-Flight Step REF D350-591

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-0-01

BY: D. SHEPHERD (DE # 02)

DATE: 10.06.08

CERT..NO.: SH92-6

ISSUE NO.: 11

DESIGN	P	DART AEROSPAC	CE LTD	
DRAWN	K	HAWKESBURY, ONTARIO, CANADA		
CHECKED	_8	DRAWING NO.	REV. A	
MFG. APPR.	N/A	DSI 9525	SHEET 4 OF 4	
APPROVED	NG	TITLE	SCALE	
DE APPR.	#	STEP CUSHION CHANGE	_ NTS	
DATE 10.0	6.08	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.		